


The DEKORKONNECT™ WiFi Controller allows wireless control of your DEKOR® installation from anywhere in the world. Fine-tune brightness, set schedules, and see the status of all your zones from the easy-to-use Bond Home app, even when you're nowhere near home. The controller is compatible with the DEKOR® Plug-N-Play system and can be used to control up to 60W of LED lights. For more information call 1.800.258.0344, or connect to our responsive chat messenger at dekorlighting.com.

CONTROLLER INSTALLATION

1. With the power supply unplugged, connect the input lead of the DEKORKONNECT™ to the DEKOR power supply.
2. Connect the Transconnect cable to your light installation to the output terminal of the DEKORKONNECT™.
3. Plug the power supply into a GFCI-protected wall socket. If you see the red "FAULT" light, your system has reversed polarity. Correct the polarity before proceeding to setup.
4. Mount the WiFi controller in place with the included pressure sensitive adhesive strips and/or by replacing the installed black screws with the included 1.5" wood screws.

CONTROLLER SETUP

1. On an Android or iOS device, download the Bond Home app.
2. Create an account and sign into the app.
3. The DEKORKONNECT™ wireless controller is a "Smart by Bond" device. Follow the in-app prompts to add the controller to your account and connect it to your home WiFi network.

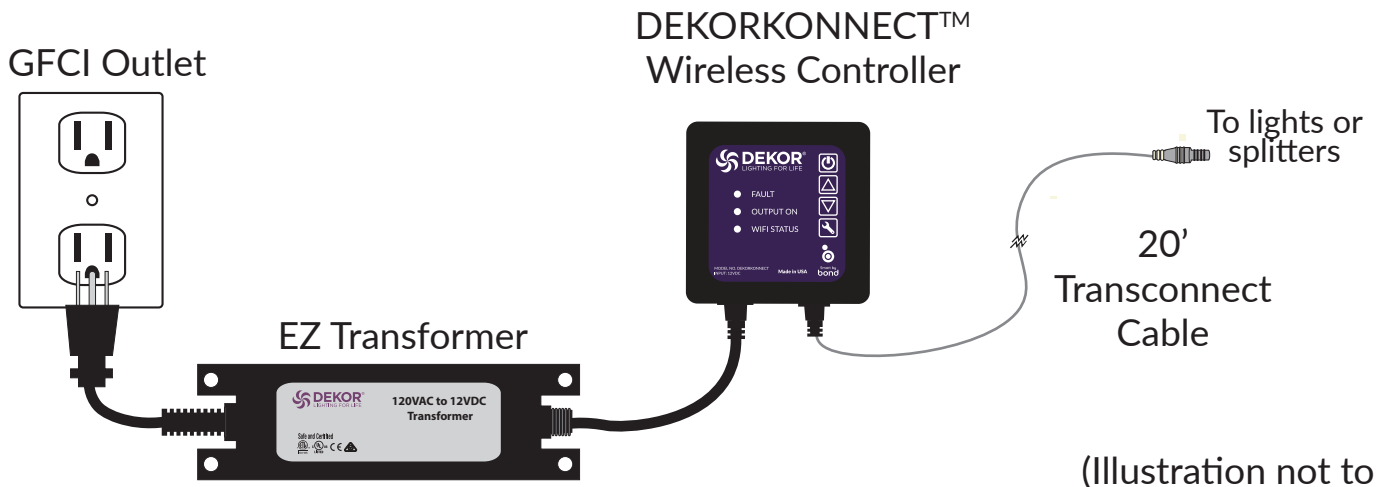

(Illustration not to scale)

HELPFUL TIPS


- » Follow the appropriate building and electrical codes when installing all DEKOR® lighting products.
- » Leave wire slack to make fixture terminations.
- » We recommend determining light placement under dark conditions prior to drilling/installing.
- » DO NOT use more than one transformer per circuit.
- » To ensure all components and connections are functional, we recommend having your power source attached and on when installing lights.

CAUTION:

When making a connection between a Plug-N-Play connector or splitter, observe the polarity key to make a proper connection.

The male and female connectors have a flat side that **MUST MATCH UP**. Do not force the connectors together.

Plug-N-Play connectors are waterproof, but use of dielectric grease is mandatory for any connection with constant exposure to water. Dielectric grease should be added prior to connection.

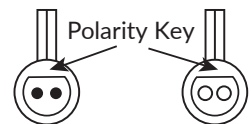

Note: Construction methods are constantly changing. For the most up-to-date instructions, please visit us at dekorlighting.com